


COACH LIGHT TRIM P700/703

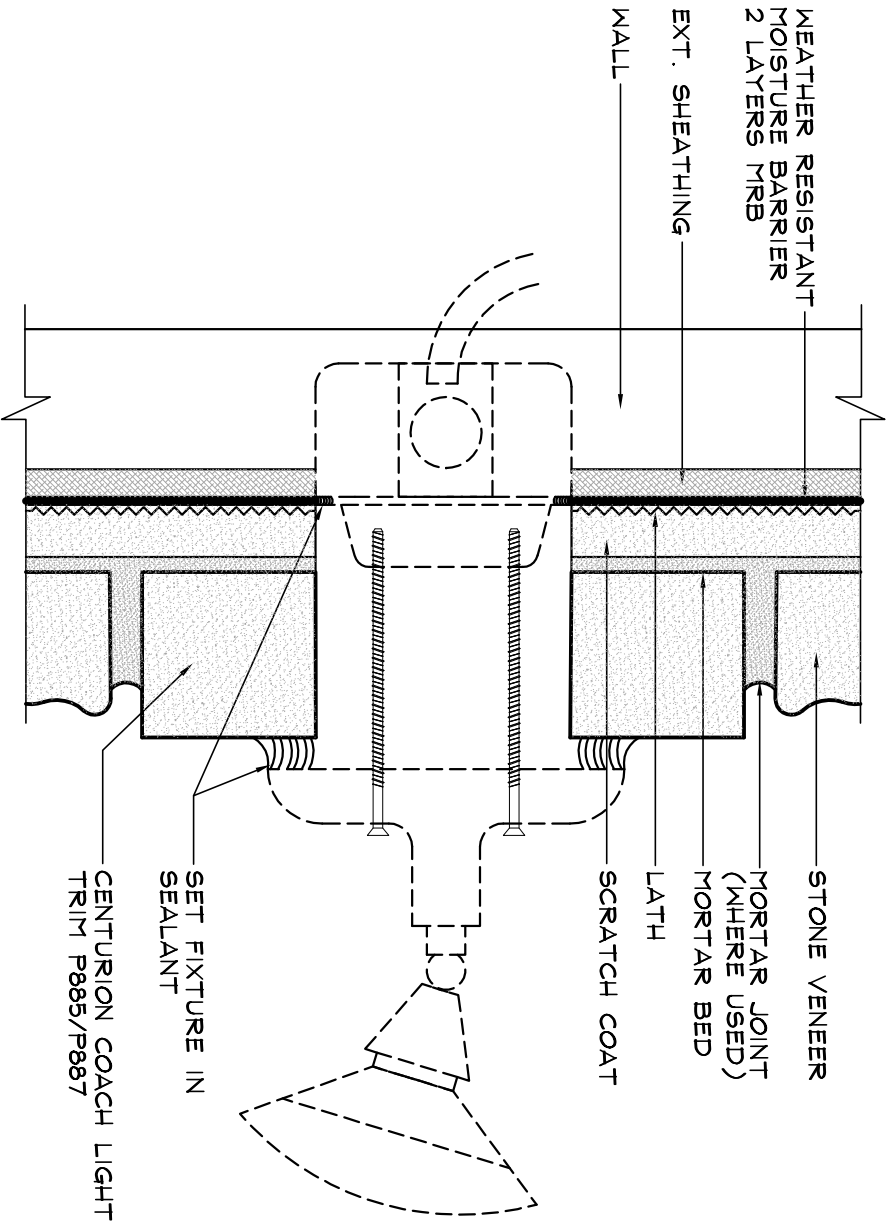


Specifications :

APPLIED : PER CENTURION STONE VENEER INSTALLATION PROCEDURES REFERENCE ICC ES REPORT ESR-2239 FOR SPECIFIC CODE REQUIREMENTS

NOTE : BE SURE TO BED ALL COVERS AND FLANGES IN SEALANT BEFORE FASTENING TO WALL

NOT TO SCALE

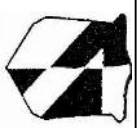

**CENTURION**  
STONE

Centurion Products, Inc  
50 Van Buren Street  
Nashville, TN 37208  
www.centurionstone.com

COACH LIGHT TRIM

M.0.4